

# Palsonic

The AUSTRALIAN Company

**LED TV**

**PT3235SB  
PT4035SB**

**OWNER'S MANUAL**

 


---

Please read this manual carefully before TV operation.  
Retain it for future reference.

# Important Safety Instructions and Maintenance

## Important Safety Instructions

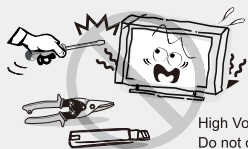

### CAUTION

 
Risk of electronic shock, do not open. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.



The screen and cabinet get warm when the TV is in use. This is not a malfunction. In case of smoke, strange noise or strange smell from the unit:

- Turn off the power switch immediately;
- Disconnect the power plug from the power outlet;
- Contact your dealer or service centre. Never attempt to make repairs yourself because this could be dangerous.

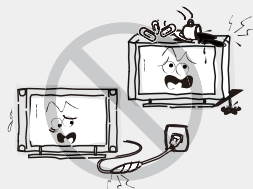

If the following problems occur:

Turn off the TV set and unplug the AC power cord immediately if any of the following problems occur. Ask your dealer or service centre to have it checked by qualified service personnel.

When:

- AC power cord is damaged.
- Poor fitting of AC power outlet.
- TV set is damaged by being dropped, hit or having something thrown at it.
- Any liquid or solid object falls through openings in the cabinet.

Never push objects of any kind into the set through the cabinet slots as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the set. Use special caution in households where children are present. The apparatus is not suitable for children under 3-year to operate.



Do not overload wall outlets, extension cords or adaptors beyond their capacity, this can result in fire or electrical shock. Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plug end, adaptors and the point where they exit from the appliance. The mains plug is used as the disconnect device. It shall remain readily accessible and should not be obstructed during intended use. Make sure to plug the power cord in until it is firmly inserted. When removing the power cord, make sure to hold the power plug when pulling the plug from the outlet, do not pull the plug out by the wire. NEVER touch the plug or power cord with wet hands. To disconnect the apparatus from the mains power, the plug must be pulled out from the mains socket, therefore make sure the mains plug is always easily accessible.



Do not push or scratch the front filter, or place any objects on top of the TV set. The image may be uneven or the screen may be damaged.

To avoid the fire, no naked flame source, such as lighted candles, should be placed on the apparatus.



# Important Safety Instructions and Maintenance

## Important Safety Instructions

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits with them might be fatal. Ensuring the television is not overhanging the edge of the supporting furniture.



Do not pull the plug out by the wire; Never touch the plug with wet hands.



### When not in use

If you will not be using the TV set for several days, the TV set should be disconnected from the AC mains for environmental and safety reasons. As the TV set is not disconnected from the AC power when the TV is turned off at the standby switch, pull the plug from the AC power outlet to disconnect the TV completely. However, some TV sets may have features that require the TV set to be left in standby to function correctly. In the case of lightning, unplug the TV set from the outlet immediately. Never touch the antenna wire during lightning.

 
Excessive volume from earphones and headphones can cause hearing loss.




## Installation



The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, tablecloths, curtains, etc. At least 10 cm space should be left around the apparatus for sufficient ventilation.

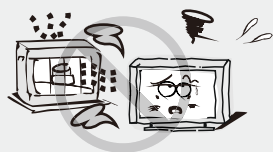

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Place the apparatus in such a position that the screen is not exposed to direct sunlight. It is best to have soft indirect lighting while watching and avoid completely dark environments and reflection from the screen as these may cause eye fatigue. Keep the TV set away from any equipment emitting electromagnetic radiation.

 

Do not place the set on an unstable cart, stand, table or shelf. The set may fall, causing serious personal injury as well as damage to the product. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



Do not place this apparatus near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or a swimming pool; and the like;

# Important Safety Instructions and Maintenance

## Installation



When the TV being moved in from cold place, it needs some right time for dew inside unit evaporating fully before turn on the unit;



To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

## LED Screen

Although the LED screen is made with high precision technology and 99.99% or more of the pixels are effective, black dots may appear or bright points of light (red, blue or green) may appear constantly on the LED screen. This is a structural property of the LED screen and is not a malfunction. If the surface of the LED panel cracks, do not touch it until you have unplugged the AC power cord. Otherwise electric shock may result. Do not throw anything at the TV set. The LED panel may break from the impact and cause serious injury.

## Precautions When Displaying a Still Image

A still image may cause permanent damage to the TV screen.

Do not display still images and partially still images on the LED panel for more than 2 hours as it can cause screen image retention. This image retention is also known as "screen burn". To avoid such image retention, reduce the degree of brightness and contrast of the screen when displaying a still image.

Watching the LED TV in 4:3 format for a long period of time may leave traces of borders displayed on the left, right and centre of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console may cause a similar effect to the screen.

Damages caused by the above effect are not covered by the Warranty.

Displaying still images from Video games and PC for longer than a certain period of time may produce partial after-images. To prevent this effect, reduce the 'brightness' and 'contrast' when displaying still images.

## Cleaning

Cleaning and handling the screen surface and cabinet. Disconnect the unit from the AC outlet before cleaning. To remove dust, wipe gently with a soft, lint free cloth. If required use a slightly damp cloth.



## MAINS PLUG

Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.



Use care not to subject the TV's surfaces to detergent. (A liquid inside the TV could lead to product failure, fire or electrical shock.) Use care not to subject surfaces to bug repellent, solvent, thinner, or other volatile substances as this may deteriorate the surface and finish of the cabinet.



## Important Information

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer or the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.
- Keep small accessories out of reach of children so they are not mistakenly swallowed.

## Table of Contents

 
<b>Accessories</b>	5
<b>Introduction</b>	6
Features	6
Specifications	7
<b>Stand and wall-mounting instructions (optional)</b>	8
<b>General Description</b>	9
Overview of front panel	9
Overview of back panel	10
Overview of remote control	11
Installing Batteries in the Remote Control	13
<b>External Connection</b>	13
Antenna connection	13
<b>Basic operation</b>	14
Turning the TV on and off	14
<b>Main Menu Operation</b>	15
Watching television programs	15
Picture Menu	15
Sound Menu	16
Channel Menu	17
Lock System Menu	18
Setup Menu	18
<b>Digital Media Player</b>	20
USB Operation	20
Photo	20
Music	20
Movie	21
Text	21
<b>Troubleshooting</b>	22

## Accessories

Please make sure the following items are included with your LED TV. If any items are missing, contact your dealer.



Remote Control

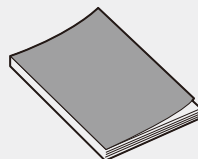

Owner's  
Instructions

# Introduction

## Features

- TV adopts 32"/40" TFT LED display screen
- Zero X radiation complies to green environment protection requirement
- Connect to computer directly to realize TV/monitor combo.
- Support USB
- Auto tuning and fine tuning
- Support HDMI
- Programmable sleep timer
- Wide range voltage input
- No-signal automatic power off

### Input terminals used for external equipment connection

- 1 × RF In
- 1 × AV input
- 1 × Coaxial out
- 3 × HDMI
- 2 × USB 2.0
- 1 × Headphone output
- 1 × VGA&PC-Audio input
- 1 x YPbPr

# Introduction

## Specifications

Model		PT3235SB	PT4035SB
Display size		32" Diagonal(max.)	40" Diagonal(max.)
LED panel resolution		1366X768	1920X1080
Speaker output power		≥5WX2	
Power supply		110-240V~, 50/60Hz	
TV receive system		Digital: AV NTSC Analog: PAL: DK, I, BG SECAM: DK, BG	
Frequency range		42.75~869.25MHz	
Video in		PAL/SECAM	
Power consumption		55W	75W
Standby consumption		<0.5W	
Antenna Input		75 ohms, unbalanced	
Controller power		DC 3V (Two AAA size batteries)	
Dimensions (L×W×H)	TV with stand	734.2×218×492.4mm	923×253×596.8mm
	TV without stand	734.2×90×473mm	923×90×579mm
Weight (Net weight)	TV with stand	4.64Kg	6.55Kg
	TV without stand	4.55Kg	6.23Kg
Work Temperature		0℃-40℃	

### NOTES:

- Design and specifications are subject to change without notice.
- Weight and Dimension shown are approximate.

## Stand and wall-mounting instructions (optional)

### How to assemble the stand

If you need to remove or assemble the stand please read the following instructions.

 
-Before attaching/detaching the stand, make sure to turn off the TV.

-Before performing work, spread cushioning over the base area to lay the LED TV on. This will prevent it from being damaged.


### Assembling instruction:

Installation instructions as shown in Fig:

Step1: Take out two stands from package, and insert them on both sides of the groove, and on the screw holes;

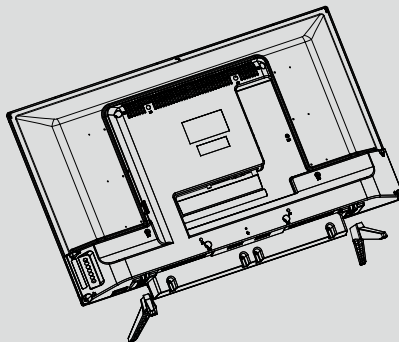

 Step2: Take out four screws provided with TV set and tighten them into screw holes;

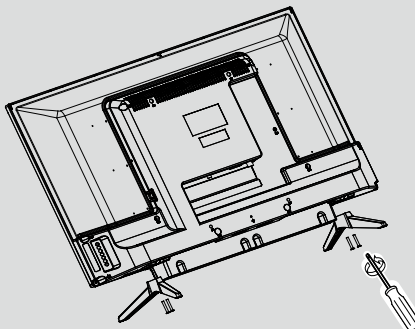


- To disconnect the stand from the TV, perform the above steps in reverse order.

# General Description
 
## Overview of front panel

The buttons on the lower-left panel control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control.

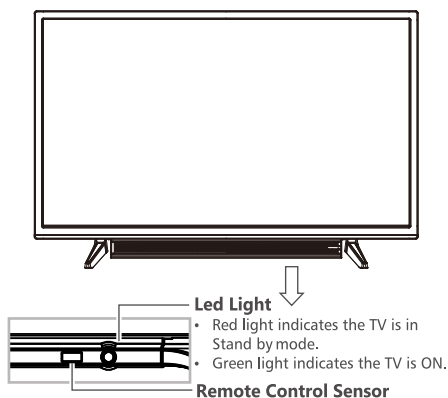

### Left side view

#### 1 **POWER (power on/standby)**

Press to turn the TV on/standby.

#### 2 **INPUT (on-screen information or input source)**

This button switches to the on-screen information or the input source selection.

#### 3 **MENU**

 
Press to select the main menu. When selectable on-screen information is displayed, it can be selected by pushing.

#### 4 **PROG ^ / V**

Press to change programs. (Not available for L16" M series)  
In the on-screen menu, use the **PROG ^ / v** buttons as up/down arrow buttons.

#### 5 **VOL - / +**


Press to change volume level.  
In the on-screen menu, use the **VOL -/+** buttons as left/right arrow buttons.



# General Description

## Overview of back panel

 You can connect the TV with video devices such as DVD/VCD player, VCR and video camera to enjoy the high quality picture.

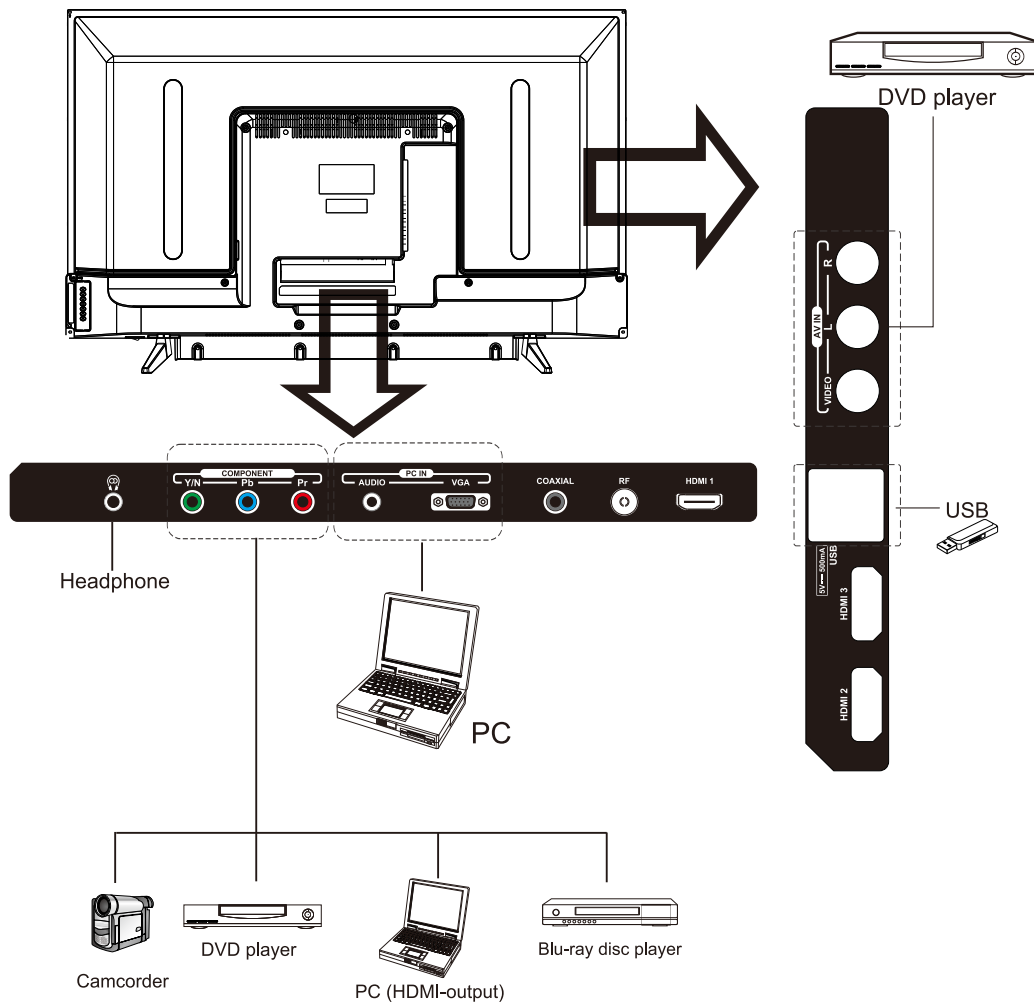

# General Description

## Overview of Remote Control



1. **POWER:** Press this button to switch to standby mode, and press it again to turn TV on.
2. **INPUT:** Press to select the input source.
3. **Digital buttons(0~9):** To select channel with digital buttons.
4. **--/--:** Press this button to enter a program number different digits, e.g.-for1,--for11.
5. **RECALL:** Switch to the previous program.
6. **MUTE:** Press this button to shut off sound of the TV, press again to restore TV sound.
7. **DISPLAY:** Button for displaying the source and information about channels.
8. **VOL+/-:** Press to increase/ decrease the sound level.
9. **AUTO/REC:** AUTO: Used for automatic configuration in the PC mode.  
REC: Press to start recording. (only in the DTV mode).
10. **CH+/-:** Press to scan through or to select a channel.
11. **FAV:** Press it to display favorite list.
12. **FREEZE:** Freeze the picture.
13. **TV/RADIO:** Switching between the TV and radio modes.
14. **SLEEP:** Let you select amount of time before your TV turn itself off automatically.
15. **EPG:** In DTV source, this button is used to start the EPG application.
16. **Arrow buttons/ENTER:** Press these buttons to move cursor up/down/left/right for menu. ENTER button is used to select the sound mode.
17. **MENU:** Press to enter or exit the setup menu.
18. **EXIT:** Press exit to exit menu or sub menu.
19. **Red/Green/Yellow/Blue Command:** These four buttons are used to request linked buttons with the current menu /page.
20. **NICAM/A2:** NICAM/A2 input.
21. **ASPECT:** Press this button to switch the screen mode.
22. **S.MODE:** This button is used to select the sound mode.
23. **HOLD:** Hold the current display.  
▶/II : Playback/pause (In the media mode).
24. **INDEX:** Call up a teletext content page.  
■ : stop.



# General Description

## Overview of Remote Control



 
- 25. **⏮** button: skip to the next track.
- 26. **TTX**: Turn teletext on or off.(Note: Teletext function is optional, the button on the remote control is only available with certain models.)
- 27. **T.SHIFT**: It is used to start recording with a time shift. Function is only available in the DTV mode.
- 28. **P.MODE**: This button is used to adjust user picture mode, press this button repeatedly and select one of four settings.
- 29. **SUBTITLE**: Press to switch the subtitles at the button of the screen, if they are available.
- 30. **PVR**: It is used to enter/exit the PVR list menu.
- 31. **REVEAL**: Press REVEAL to display or hide hidden teletext information(depends on the broadcast).  
    **⏮** button: fast rewind
- 32. **SIZE**: Press size to change the size of the screen in the TTX mode.  
    **⏭** button: fast forward.
- 33. **S.PAGE**: Press S.PAGE to enter a teletext sub page.  
    **⏭** button: skip to the next track.
- 34. **AUDIO**: DTV mode: select a background sound, if available.

## General Description


### Installing Batteries in the Remote Control

#### Installing Batteries


- 1 Open the battery compartment cover on the back side.

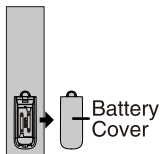

 - 2 Insert two 1.5V AAA size batteries in correct polarity. Don't mix old or used batteries with new ones.

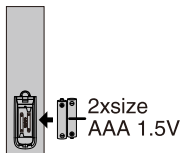

- 3 Closed the cover.

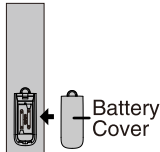 

- ✦ Point the remote towards the remote control sensor of the TV and use it within 8 meters.
- ✦ Put the used batteries into the recycling bin since they can negatively affect the environment.

#### NOTES:

 
- One loading of batteries will last for 1 year under normal use.
- If you do not intend to use the remote controller for a long period of time, remove them to avoid damage due to leakage.
- Do not use old and new batteries together.
- The batteries (battery pack or batteries installed) shall not exposed to excessive heat such as sunshine, fire or the like.

## External Connection


### Antenna connection

Antenna input impedance of this unit is 75ohm. VHF/UHF 75ohm coaxial cable can be connected to the antenna jack directly, if the antenna cable is 300ohm parallel flat feeder cable, you need to use the 300ohm/75ohm converter to connect the antenna cable to the antenna jack. For details Please refer to the following drawing.

#### Antennas with 300 $\Omega$ flat twins Leads

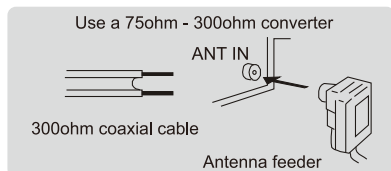

#### Antennas with 75 $\Omega$ Round Leads

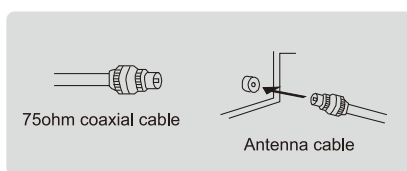 


## Basic Operation

### Turning the TV On and Off

#### ***How to turn the TV on or off***

 1. Insert the power cord plug into a polarized AC outlet.
2. If TV is in standby mode, press **POWER** button on the remote control or **⏻** button on the bottom panel of LED TV.
3. Normal picture will be displayed on the screen after 15 seconds. If no signal input, "No Signal" will be displayed on the screen.
4. If temporary POWER off is required, press POWER button on the remote control or **⏻** button on the bottom panel.
5. If you want to completely switch off the power for this unit, unplug the power cord plug for this unit.
6. After switching off the unit, you should wait at least 5 seconds before switching on again.

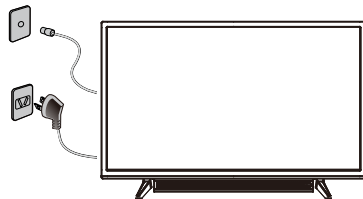

#### ***Status indication lamp***

Red: In standby mode.

Green: In power on mode.

#### ***Auto power-off***

1. If there is no signal, the TV will automatically enter standby mode after 10 minutes.

#### ***Memory before turning TV off***

The picture and sound settings and preset channels will be memorized at the point when the TV is turned off. When the TV is started up again it will work accordingly with these settings.

# Main Menu Operation

## Watching television programs

Connect the power cord, press **STANDBY** button to power on the television, then press button to select TV channel mode to watch television programs.



## Picture Menu

Press **MENU** button to display the main men.  
Press **◀/▶** button select **PICTURE** in the main menu, then press **ENTER/▼** to enter.



1. Press **▲/▼** button to select the option that you want to adjust in the PICTURE menu.
2. Press **ENTER/◀/▶** button to adjust.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

### Picture Mode

Press **▲/▼** button to select Picture Mode, then press **◀/▶** button to select. (Available Picture mode: Standard, Mild, Dynamic, Personal).

**TIPS:** You can press **PMODE** button to change the Picture Mode directly.

### Brightness/Contrast/Sharpness/Saturation/Hue

Press **▲/▼** button to select the option, then press **◀/▶** button to adjust.

#### Brightness

Adjust the optical fiber output of the entire picture, it will effect the dark region of the picture.

#### Contrast

Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

#### Sharpness

Adjust the peaking in the detail of the picture.

#### Saturation

Adjust the saturation of the color based on your own like.

#### Hue

Use in compensating color changed with the transmission in the NTSC code.

### Color Temp

Change the overall color cast of the picture.

Press **▲/▼** button to select Color Temp, then press **◀/▶** button to select Standard/Cool/Warm.

### Aspect Ratio

Press **▲/▼** button to select Aspect Ratio, then press **◀/▶** button to select. (Available Aspect mode: Full, Zoom1, Zoom2, Auto, 4:3)

### Screen Mode

Minimize vertical stripes in the screen image. Press **▲/▼** button to select HDMI Mode, then press **◀/▶** button to select Auto, Video or PC. It is available in HDMI Input only.

### Advanced Settings

Adjust advanced video features to fine tune the picture.

Press **▲/▼** button to select Advanced Settings, then press **ENTER/▶** button to enter sub-menu.



### NR

Set options to reduce video noise. Press **▲/▼** button to select NR, then press **◀/▶** button to select. (Available NR mode: Off, Weak, Medium, Strong).

### Dynamic Contrast

 
Automatically adjust picture detail and brightness.

Press **▲/▼** button to select Dynamic Contrast, then press **◀/▶** button to select. (Available Dynamic Contrast mode: Off, Weak, Medium, Strong).

# Main Menu Operation

## Sound Menu

Press **MENU** button to display the main men.  
Press **◀/▶** button select **Sound** in the main menu,  
then press **ENTER/▼** to enter.

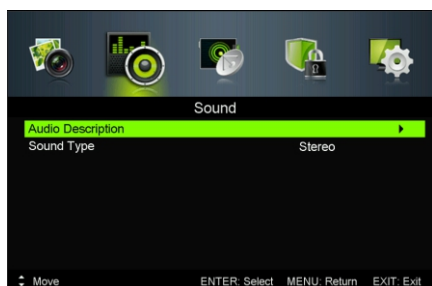

1. Press **▲/▼** button to select the option that you want to adjust in the SOUND menu.
2. Press **ENTER/◀/▶** button to adjust.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

### Sound Mode

Press **▲/▼** button to select Sound Mode, then press **◀/▶** button to select. (Available Sound mode: Standard, Music, Movie, Personal).

### Treble/Bass/Balance

Press **▲/▼** button to select option, then press **◀/▶** button to adjust.

#### Treble

Adjust the treble effect. Increases or decreases high-pitched sounds.

#### Bass

Adjust the bass effect. Increases or decreases lower-pitched sounds.

#### Balance

Adjust the balance between left and right speakers to adapt to your listening position.

### Surround Sound

Press **▲/▼** button to select Surround Sound, then press **◀/▶** button to select On or Off.

### EQ Setting

Adjust the curve of 7 bands equalizer.

Press **▲/▼** button to select EQ Setting, then press **ENTER/▶** button to enter sub-menu.

#### EQ Mode

Press **▲/▼** button to select EQ Mode, then press **◀/▶** button to select. (Available EQ mode: Off, Rock, Pop, Jazz, User)



### AVL

Set the auto volume control.

Press **▲/▼** button to select AVL, then press **◀/▶** button to select On or Off.

### SPDIF

Press **▲/▼** button to select SPDIF, then press **◀/▶** button to adjust. (SPDIF mode: Off, Auto, PCM)

### Audio Description

Press **▲/▼** button to select Audio Description, then press **ENTER/▶** button to enter sub-menu.

#### Mode

Press **▲/▼** button to select Mode, then press **◀/▶** button to select On or Off.

When the mode is On, Volume can be adjust by users.

### Sound Type

Press **▲/▼** button to select Sound Type, then press **◀/▶** button to select. (Available Sound mode: Stereo, Dual I, Dual II, Mixed)

# Main Menu Operation

## Channel Menu

Press **MENU** button to display the main men.  
Press **◀/▶** button select **Channel** in the main menu,  
then press **ENTER/▼** to enter.



1. Press **▲/▼** button to select the option that you want to adjust in the Channel menu.
2. Press **ENTER/◀/▶** button to adjust.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

### Auto Scan

Press **▲/▼** button to select Auto Scan, then press **ENTER/▶** button to enter sub-menu.

### Country

Press **◀/▶** button to select country.

 
### Mode

Press **◀/▶** button to select Mode: DTV+ATV, DTV, ATV.

### Start

Press **ENTER/▶** button to start the auto searching. It will search digital channels first, then analog channels.

Note: Before execute auto channel search, please confirm your antenna type is Air or Cable. Wrong setting of Signal Type maybe cause finding no channel. Found numbers do not include encryption programs.

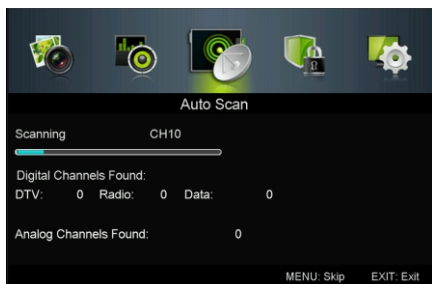

### Manual Scan

Press **▲/▼** button to select Manual Scan, then press **ENTER/▶** button to enter sub-menu.

### Digital Manual Scan

Press **▲/▼** button to select Digital Manual Scan, then press **ENTER/▶** button to enter sub-menu.

### Analog Manual Scan

Press **▲/▼** button to select Analog Manual Scan, then press **ENTER/▶** button to enter sub-menu.



### Channel Edit

Press **▲/▼** button to select Channel Edit, then press **ENTER/▶** button to enter sub-menu. Press corresponding button to operate channel.

### Signal Information

Press **▲/▼** button to select Signal Information, then press **ENTER** button to see the detail information about the signal. Only available when there is signal under DTV.

# Main Menu Operation

## Lock System Menu

Press **MENU** button to display the main men.  
Press **◀/▶** button select **Lock System** in the main menu, then press **ENTER/▼** to enter.



### Enter Password

1. Press **▲/▼** button to select the option that you want to adjust in the Enter Password menu.
2. Press **ENTER/◀/▶** button to adjust.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu. Default password is 0000 and if forget what you set, please call the service center.



### Enable

Press **▲/▼** button to select Enable, then press **◀/▶** button to select On or Off.

Note: Channel Locks, Parental Rating and Lock Keypad are available when Enable is On.

### Channel Locks

Press **▲/▼** button to select Channel Locks, then press **ENTER/▶** button to enter sub-menu. In this option, you can lock channel according to the instruction.

### Parental Rating

Press **▲/▼** button to select Parental Rating, then press **◀/▶** button to select. (Available Parental Rating Mode: Block R, Block All, No Block, Block G, Block PG and so on)

### Lock Keypad

Set to prevent it from being used by young children, or other unexpected usage.

Press **▲/▼** button to select Lock Keypad, then press **◀/▶** button to select On or Off.

### New Password

Press **▲/▼** button to select New Password, then press enter a 4-digital number you want to set twice.

### Clear Lock

Press **▲/▼** button to select Clear Lock, then press **ENTER/▶** button to enter sub-menu.

## Setup Menu

Press **MENU** button to display the main men.  
Press **◀/▶** button select **Setup** in the main menu, then press **ENTER/▼** to enter.



1. Press **▲/▼** button to select the option that you want to adjust in the Setup menu.
2. Press **ENTER/◀/▶** button to adjust.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

### OSD Language

Press **▲/▼** button to select OSD Language, then press **◀/▶** button to select the language that you want.

### Audio Languages

Press **▲/▼** button to select Audio Languages, then press **ENTER** button to enter the sub-menu. Press **▲/▼/◀/▶** button to select the Audio Primary Language and Audio Secondary Language.

# Main Menu Operation

## Subtitle

Press ▲/▼ button to select Subtitle, then press ENTER button to enter sub-menu. Press ▲/▼/◀/▶ button to select the Subtitle Primary Language, Subtitle Secondary Language and Hearing Impaired. Note: The three options described above are available when the Mode is On.

## Teletext

Adjust Teletext settings.  
Only available under DTV and ATV source.  
Press ▲/▼ button to select Teletext, then press ENTER/▶ button to enter sub-menu.

## Blue Screen

 
Press ▲/▼ button to select Blue Screen, then press ◀/▶ button to select On or Off.

## Mode Setting

Press ▲/▼ button to select Mode Setting, then press ◀/▶ button to select Store Mode or Home Mode.

## Time Settings

Press ▲/▼ button to select Time Settings, then press ENTER/▶ button to enter sub-menu.

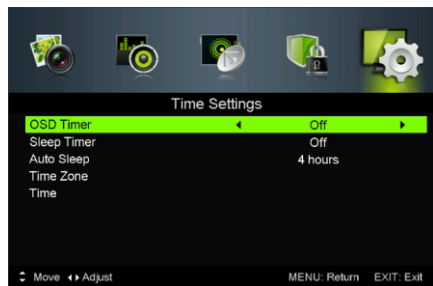

## OSD Timer

Press ▲/▼ button to select OSD Timer, then press ◀/▶ button to select. (Available OSD Timer: Off, 10seconds, 20seconds, 30seconds, 60seconds)

## Sleep Timer

Set a timer for the TV to turn off automatically.  
Press ▲/▼ button to select Sleep Timer, then press ◀/▶ button to select. (Available Sleep Timer: Off, 5mins, 15mins, 30mins, 60mins, 90mins, 120mins, 240mins)

## Auto Sleep

Press ▲/▼ button to select Auto Sleep, then press ◀/▶ button to select. (Available Auto Sleep: Off, 3hours, 4hours, 5hours)

## Time Zone

 
Select your time zone.  
Press ▲/▼ button to select Time Zone, then press ENTER/▶ button to enter sub-menu.

## Time

Press ▲/▼ button to select Time, then press ENTER/▶ button to enter sub-menu.


## PVR Settings

Press ▲/▼ button to select PVR Settings, then press ENTER/▶ button to enter sub-menu. It will check the USB.

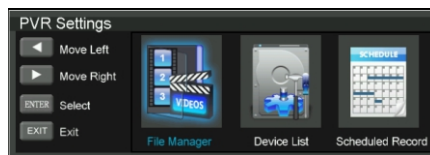

## First Time Setup

 Press ▲/▼ button to select First Time Setup, then press ENTER/▶ button to enter sub-menu.

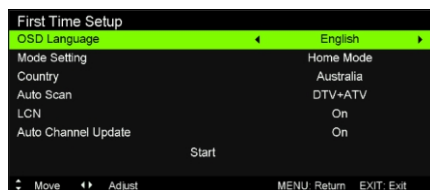

## Reset

Press ▲/▼ button to select Reset, then press ENTER/▶ button to enter.

## EPG Menu

Press the button EPG in the remote control to enter EPG menu.

Press the Red button to display previous date.

Press the Green button to display next date.

Press the Yellow button to see the setting you have done before.

Press the Blue button to set the time you want to remind the program you want to see.



# Digital Media Player

 
 
## USB Operation

Note: Before operating USB menu, plug in USB device. Then press **INPUT** button to set the input source to USB. Press **◀/▶** button to select USB in the Source menu. Then press **ENTER** button to enter. Press **◀/▶** button select the option you want to adjust in the main USB menu, then press **ENTER** button to enter.





## Photo

Press **◀/▶** button to select Photo in the main menu, then press **ENTER** button to enter. Press **◀/▶/▲/▼** button select drive disk you want to watch, then press **ENTER** button to enter. Press **◀/▶/▲/▼** button select return option to back to the previous menu.

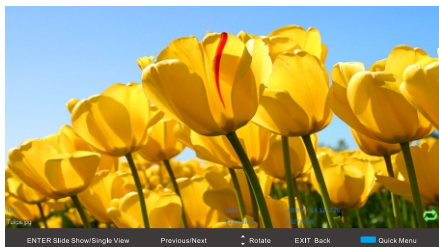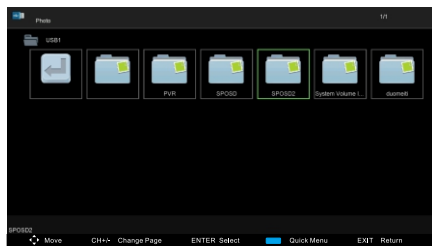

## Music

  Press **◀/▶** button to select **Music** in the main menu, then press **ENTER** button to enter. Press **▲/▼** button select drive disk you want to listen, then press **ENTER** button to enter. Press **▲/▼** button select return option to back to the previous menu.

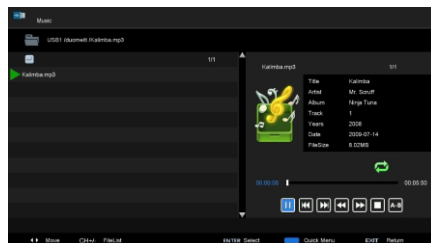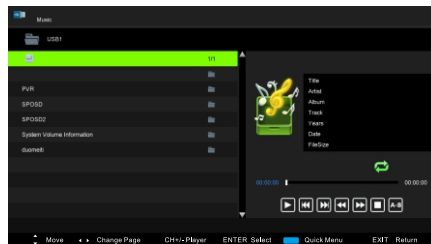

Note: When highlighting the option you select, the file information will appear on the right.



Press to play or pause.



Press to play the previous music.



Press to play the next music.



Press to play backward.



Press to play faster.



Press to stop and back to the previous folder.





Set A-B to play repeatedly. Press once to set A, and press again to set B, then press the third time to cancel.

# Digital Media Player
  
## Sound

### Movie

Press ◀/▶ button to select **Movie** in the main menu, then press **ENTER** button to enter.  
Press ▲/▼ button select drive disk you want to watch, then press **ENTER** button to enter.  
Press ▲/▼ button select return option to back to the previous menu..

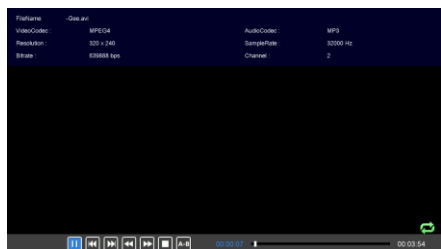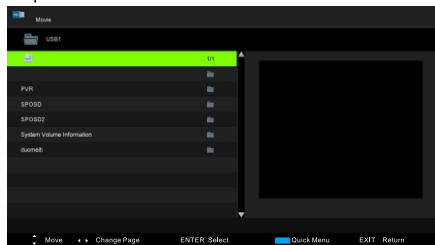

Press to play or pause.



Press to play the previous movie.



Press to play the next movie.



Press to play backward.



Press to play faster.





Press to stop and back to the previous folder.



Set A-B to play repeatedly. Press once to set A, and press again to set B, then press the third time to cancel.

### Text

  Press ◀/▶ button to select **Text** in the main menu, then press **ENTER** button to enter.  
Press ▲/▼ button select drive disk you want to watch, then press **ENTER** button to enter.  
Press ▲/▼ button select return option to back to the previous menu.

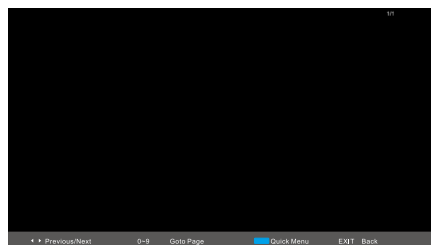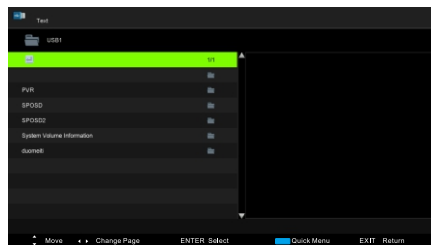

## Troubleshooting

If you have any problem, check the counter measures for each symptom listed below. The following symptoms may have been caused by inappropriate adjustment rather than actual malfunction of the unit. If the trouble persists, contact the Customer Care Centre, see back page for contact details.

Symptoms	Possible solutions
No power	Please check the power cord plugged in and that the power outlet works. Unplug the power cord and plug it in after 60 seconds and restart the TV.
No picture	Please check antenna connection. Station may be experiencing problems, please tune to another station. Please adjust the settings of contrast and brightness.
Good picture but no sound	Please increase the volume. Please check TV is under mute mode, press MUTE button on the remote control. Please check sound settings If external devices are being used, check their volumes are not set too low or turned off. If using DVI to HDMI cable, a separate audio cable is required. Make sure a headphone jack is not connected..
Good sound but abnormal color or no picture	Please check antenna connection and antenna condition. If using Component input, please check Component connections, incorrect or loose connections may cause colour problems or cause the screen to be blank.
No response to remote control	Batteries of remote control may have exhausted, if necessary, please change the batteries. Clean the remote control lens. The distance between LED TV and remote control should be within 8m, within recommended operating angle and path is free of obstructions.
Full screen flickering under VGA	V-HEIGHT value may be set too big, restart computer and enter safe mode, then set monitor parameters to correct value according to adjustment description.
Horizontal stripes under VGA	Sample phase may be deflected, adjust phase according to picture position.
Colored dots may be present on the screen	Although the LED screen is made with high-precision technology and 99.99% or more of the pixels are effective, black dots may appear or bright points of light (red, blue, or green) may appear constantly on the LED screen. This is a structural property of the LED screen and not a malfunction.
Picture is breaking up	Keep the TV away from noisy electrical sources such as cars, hair dryers, welders, and all optional equipment. Electrical atmospheric interference such as local or distant lightning storms may cause picture to break up. When installing optional equipment, leave some space between the optional equipment and the TV. Check the antenna and connection. Keep the antenna away from any power or input/output cables.

## Troubleshooting

After Auto Tuning only some channels are available	Check your area is covered by Digital Video Broadcasts. Try re-tuning or manually tuning missing channels. Check that you are using the correct antenna type.
Channel cannot be selected	Check if the channel has been blocked in the main menu settings.
USB not playing	Please check connecting USB cable and power supply is connected. Hard drive has not been formatted. Please make sure USB disk is compatible and the multimedia data formats are supported.
Picture is distorted, macroblock, small block, dots, pixelization, etc	Compression of video contents may cause distortion especially on fast moving pictures such as sports and action movies.
Noise from speaker	Check cable connections, make sure a video cable is not connected to an audio input. Low signal level may cause sound distortion.
TV turns off automatically	Check if the Off Timer is set to On in the Setup menu. Sleep Timer may have been enabled. If there is no signal for about 10 minutes from an input, the TV will turn off. If connected to your PC, check your PC power settings. Make sure the AC power cord is plugged in securely to the wall outlet and the TV.
TV turns on automatically	Check if the On Timer is set to On in the Setup menu.
Picture is not shown in full screen	Black bars on each side will be shown on HD channels when displaying SD (4:3) contents. Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. Adjust picture size option on your external device or TV to full screen.

## WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls

If your existing television set is being retained and relocated, the same considerations as above should be applied.

The plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

**Palsonic**  
The AUSTRALIAN Company